




PD-01

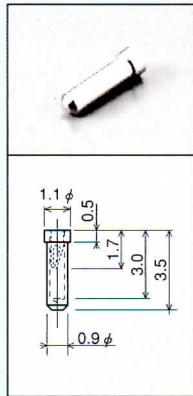


PD-05

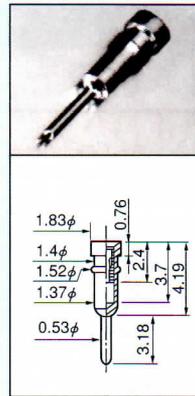


PD-1
PD-10

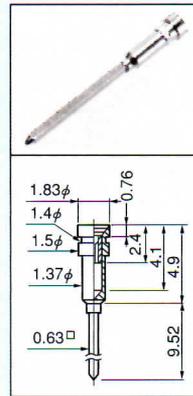


PD-2

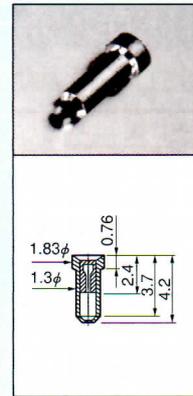


PD-4
PD-40

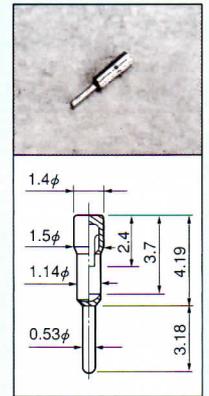


PD-6
PD-60

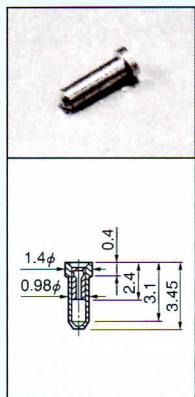


PD-7
PD-70

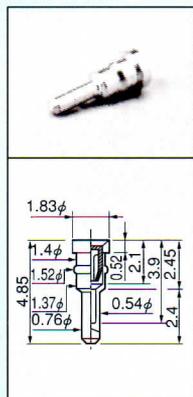


PD-8
PD-80

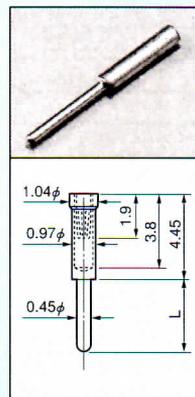


L
PD-9,90... 4.57
PD-91,910...10.16

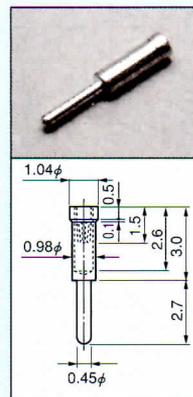


PD-11

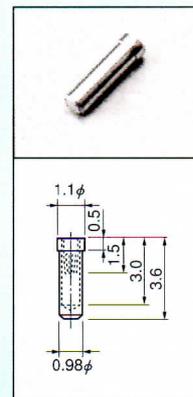


PD-12

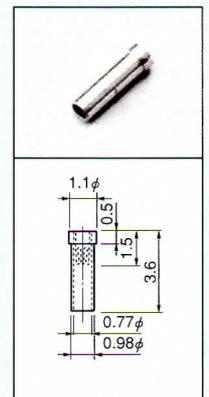


PD-13
(底が貫通)

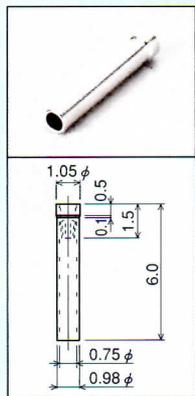


PD-14
(片側に電線が圧着
できます。)

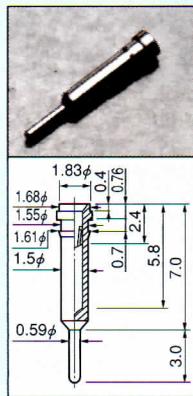


PD-31
PD-310

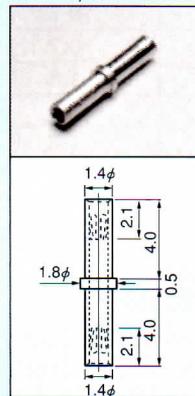


PD-51
(両方向からオスピン
が挿入できます。)

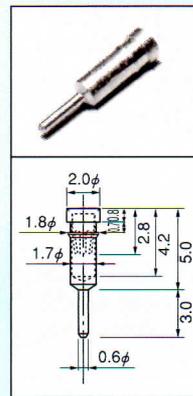


PD-61

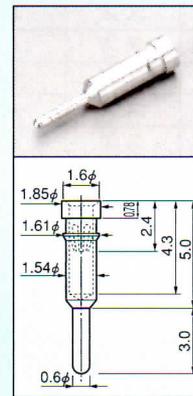


PD-61A

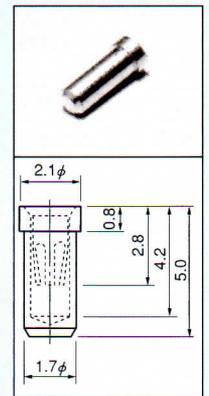


PD-62

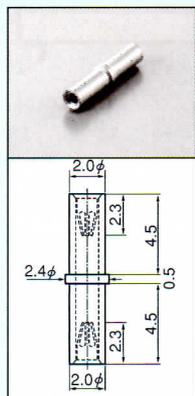


PD-63
(両方向からオスピン
が挿入できます。)

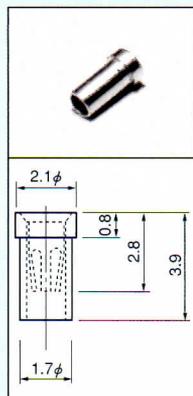


PD-66
(底が貫通)

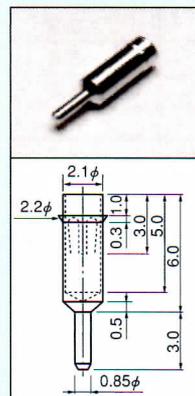


PD-71

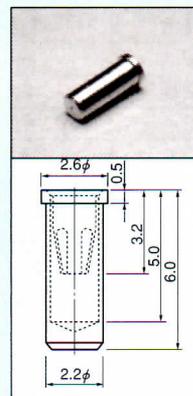

PD-72

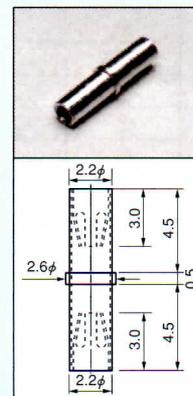

PD-73
(両方向からオスピン
が挿入できます。)

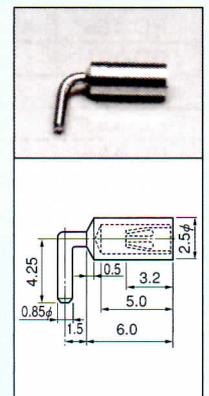

PD-74

ソケットピン